

COOLANT LEVEL SENSOR FOR 2008-2017 INTERNATIONAL DURASTAR

Item Number: 26014

COOLANT LEVEL SENSOR INSTALLATION INSTRUCTIONS

- 1 Unplug connector from existing Coolant Reservoir.
- 2 Remove existing Coolant Level Sensor.
- 3 Insert new Coolant Level Sensor into Coolant Reservoir.
- 4 Reconnect connector onto the new Coolant Level Sensor.

