

COOLANT RESERVOIR FOR 2017-2020 ISUZU FTR

Item Number: 26017

COOLANT TANK INSTALLATION INSTRUCTIONS

- 1 Disconnect clamps and hoses and drain coolant from the original tank.
- 2 Unbolt and remove tank.
- 3 Inspect the hoses for any damage. If needed, replace any worn out or damaged hoses.
- 4 Install new tank and bolt down.
(see truck's service manual for torque specifications)
- 5 Connect all hose connections onto the new tank and clamp down with hose clamps.
- 6 Remove cap and fill the reservoir with coolant fluid.
Check for leaks.
- 7 Re-install the reservoir cap.

