




United Pacific

POINTED REAR AXLE COVER KIT

Item # 10261 / 10340

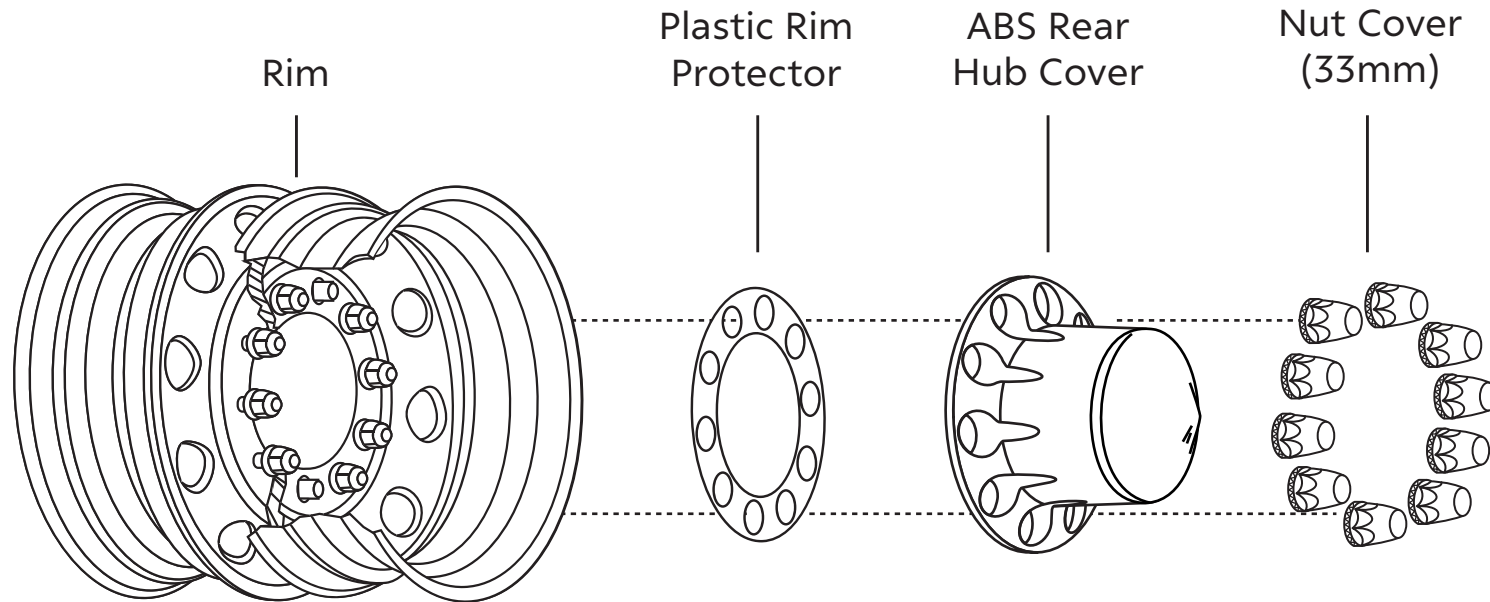

Rear Axle Cover Installation

A minimum of 3 threads extending through the top of each nut is required for installation

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Rear Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install threaded nut covers on each wheel stud by turning clockwise until tight.
Nut covers should now be secure on each wheel stud.

CAUTION: The Plastic Rim Protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. United Pacific shall not be responsible for improper installation of the product.