


**IMPORTANT NOTE:** For installation with included thread-on nut covers, a minimum of 6 threads or half inch of threads extending through the top of each lug nut is required. If exposed threads do not meet the minimum requirement, please purchase metal washers (UP Item 10262-1) to secure the base onto the wheel, will require removal of the lug nut to use the metal washers/rings.



No.	DESCRIPTION	Qty/Kit
A	FLAT AERO COVER	1
B	THREAD-ON NUT COVER	10
C	MOUNTING BASE	1
D	PLASTIC WHEEL PROTECTOR FILM	1
E	AERO COVER REMOVAL TOOL	1

**Fits standard 22.5" X 8.25" steel wheels and aluminum wheels.**

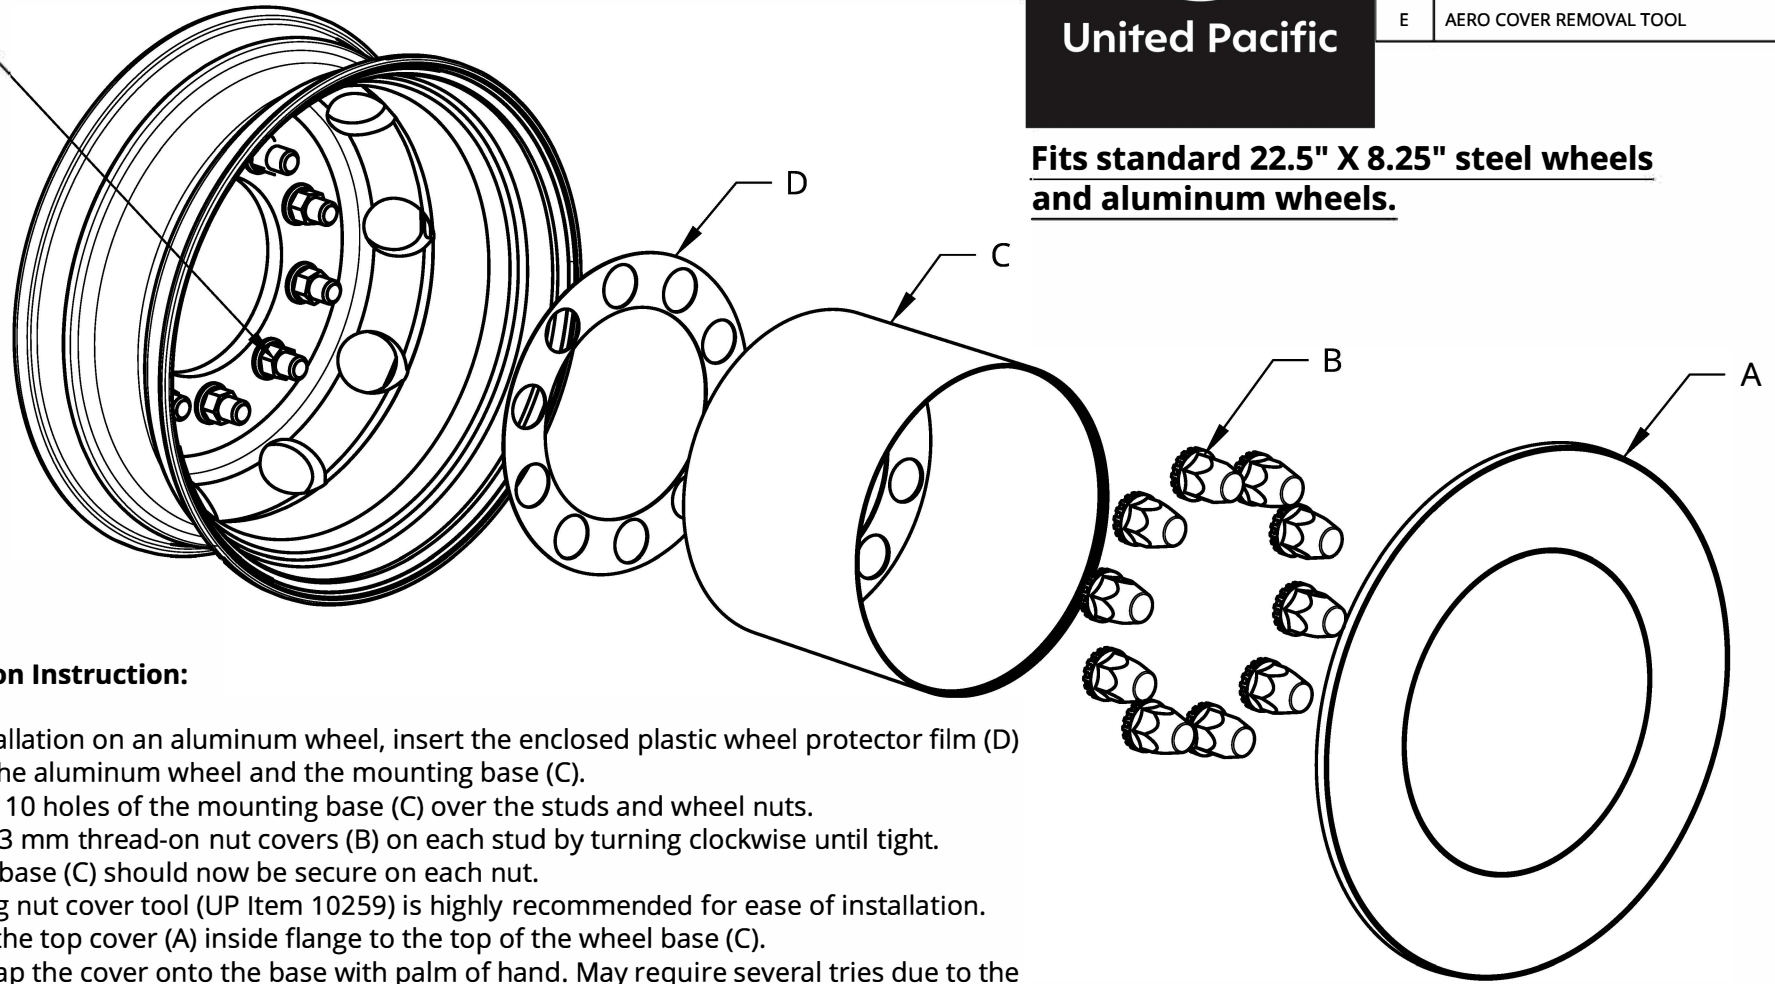

**Installation Instruction:**

1. For installation on an aluminum wheel, insert the enclosed plastic wheel protector film (D) between the aluminum wheel and the mounting base (C).
2. Align all 10 holes of the mounting base (C) over the studs and wheel nuts.
3. Install 33 mm thread-on nut covers (B) on each stud by turning clockwise until tight. Mounting base (C) should now be secure on each nut.  
- Lug nut cover tool (UP Item 10259) is highly recommended for ease of installation.
4. Center the top cover (A) inside flange to the top of the wheel base (C).
5. Firmly tap the cover onto the base with palm of hand. May require several tries due to the tight tolerance on the two parts.
6. A "pop" sound should be heard once Aero cover is snapped on the mounting base. Check that the edge of the Aero cover has even gap all around the wheel (about 1/16" to 1/18").

**Removal Instruction:**

1. Use included removal tool (E), carefully slide into any one of the three notes on the wheel.
2. Slowly pull and edge of Aero cover away from wheel (pull, do not pry). Be prepared to catch the Aero cover from hitting the ground.

Item No. 10359 / 10360  
 Product Name:  
 Flat Aero Rear Axle Cover